### 地址码设置:

地址	K1	K2	К3	K4	К5	K6	地址	K1	K2	К3	K4	K5	К6
0	0FF	0FF	OFF	OFF	0FF	0FF	32	OFF	OFF	0FF	OFF	OFF	ON
1	ON	0FF	OFF	OFF	OFF	0FF	33	ON	OFF	OFF	OFF	OFF	ON
2	0FF	ON	OFF	OFF	OFF	0FF	34	OFF	ON	OFF	OFF	OFF	ON
3	ON	ON	OFF	0FF	0FF	0FF	35	ON	ON	OFF	OFF	OFF	ON
4	OFF	OFF	ON	0FF	0FF	0FF	36	OFF	OFF	ON	OFF	OFF	ON
5	ON	OFF	ON	OFF	OFF	0FF	37	ON	OFF	ON	OFF	OFF	ON
6	0FF	ON	ON	0FF	OFF	0FF	38	OFF	ON	ON	OFF	OFF	ON
7	ON	ON	ON	0FF	OFF	0FF	39	ON	ON	ON	OFF	OFF	ON
8	OFF	0FF	OFF	ON	OFF	0FF	40	OFF	OFF	OFF	ON	OFF	ON
9	ON	0FF	0FF	ON	OFF	0FF	41	ON	OFF	OFF	ON	OFF	ON
10	OFF	ON	OFF	ON	0FF	0FF	42	OFF	ON	OFF	ON	OFF	ON
11	ON	ON	0FF	ON	OFF	0FF	43	ON	ON	OFF	ON	OFF	ON
12	OFF	0FF	ON	ON	OFF	0FF	44	OFF	OFF	ON	ON	OFF	ON
13	ON	0FF	ON	ON	OFF	OFF	45	ON	OFF	ON	ON	OFF	ON
14	OFF	ON	ON	ON	0FF	0FF	46	OFF	ON	ON	ON	OFF	ON
15	ON	ON	ON	ON	OFF	0FF	47	ON	ON	ON	ON	OFF	ON
16	0FF	0FF	OFF	0FF	ON	0FF	48	OFF	OFF	OFF	OFF	ON	ON
17	ON	OFF	OFF	OFF	ON	0FF	49	ON	OFF	OFF	OFF	ON	ON
18	OFF	ON	OFF	OFF	ON	0FF	50	OFF	ON	0FF	OFF	ON	ON
19	ON	ON	OFF	OFF	ON	0FF	51	ON	ON	0FF	OFF	ON	ON
20	OFF	OFF	ON	0FF	ON	0FF	52	OFF	OFF	ON	OFF	ON	ON
21	ON	OFF	ON	0FF	ON	OFF	53	ON	OFF	ON	OFF	ON	ON
22	OFF	ON	ON	0FF	ON	OFF	54	OFF	ON	ON	OFF	ON	ON
23	ON	ON	ON	0FF	ON	OFF	55	ON	ON	ON	OFF	ON	ON
24	OFF	0FF	OFF	ON	ON	OFF	56	OFF	OFF	OFF	ON	ON	ON
25	ON	0FF	OFF	ON	ON	0FF	57	ON	OFF	OFF	ON	ON	ON
26	OFF	ON	OFF	ON	ON	OFF	58	OFF	ON	OFF	ON	ON	ON
27	ON	ON	OFF	OFF	ON	0FF	59	ON	ON	OFF	ON	ON	ON
28	OFF	OFF	ON	ON	ON	0FF	60	OFF	0FF	ON	ON	ON	ON
29	ON	OFF	ON	ON	ON	0FF	61	ON	OFF	ON	ON	ON	ON
30	OFF	ON	ON	ON	ON	0FF	62	OFF	ON	ON	ON	ON	ON
31	ON	ON	ON	ON	ON	0FF	63	ON	ON	ON	ON	ON	ON

# 直流云台解码器

# 操作手册

## 直流云台解码器使用说明书

#### 一、产品特点:

1、采用RS-485通讯方式,兼容性强

2、此解码器方便小巧,便于安装,可实现对直流云台上、下、左、右四个方向控制和摄像机镜头聚焦、变倍、光圈控制,并且有两组开关量可实现其他功能扩展。

#### 二、技术参数:

1、输入电压: DC12V±10%

2、静态功耗: 1W

3、云台驱动最大电流: 2A

4、云台驱动电压: DC12V

5、摄像机驱动电压: DC12V可选

6、工作温度: -10℃-50℃

7、通讯方式: RS-485

8、波特率: 2400、4800、9600可选


9、地址码: 0-63可设 10、辅助开关: 两组

11、开关触点电流: 3A

12、电路板尺寸: 64mmX84mm

#### 三、接线说明

12V	GND	HL HR	TU TD	Α	В	AUX1	AUX2
电源 输入+	电源输入-	云台 水平控制	云台 垂直控制	485 输入A	485 输入B	辅助 开关1	辅助 开关2
С	Z	F	I	12V	GND		
公共	变倍	聚焦	光圏	镜头 电源+	镜头 电源-		

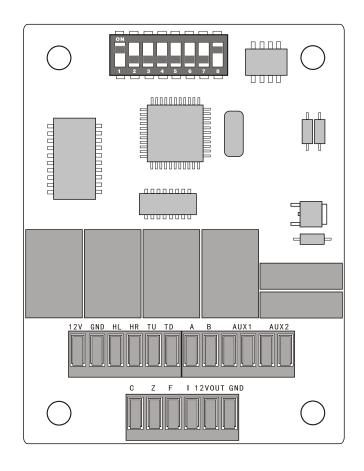

#### 四、波特率及地址码设定

解码器上有一个8位拨码开关,第1-6位为地址选择位,第7,8位为波特率选择位。波特率设定如下表:

波特率	K7	K8		
2400	ON	ON		
4800	OFF	ON		
9600	ON	OFF		